


## US-MUX user's guide

the mux has two working mode :

- auto change on all Pulse Repetitive Fréquency
- manuel mode (user select the output to use)


to use the auto mode just press the auto mode button on the top of the main screen.

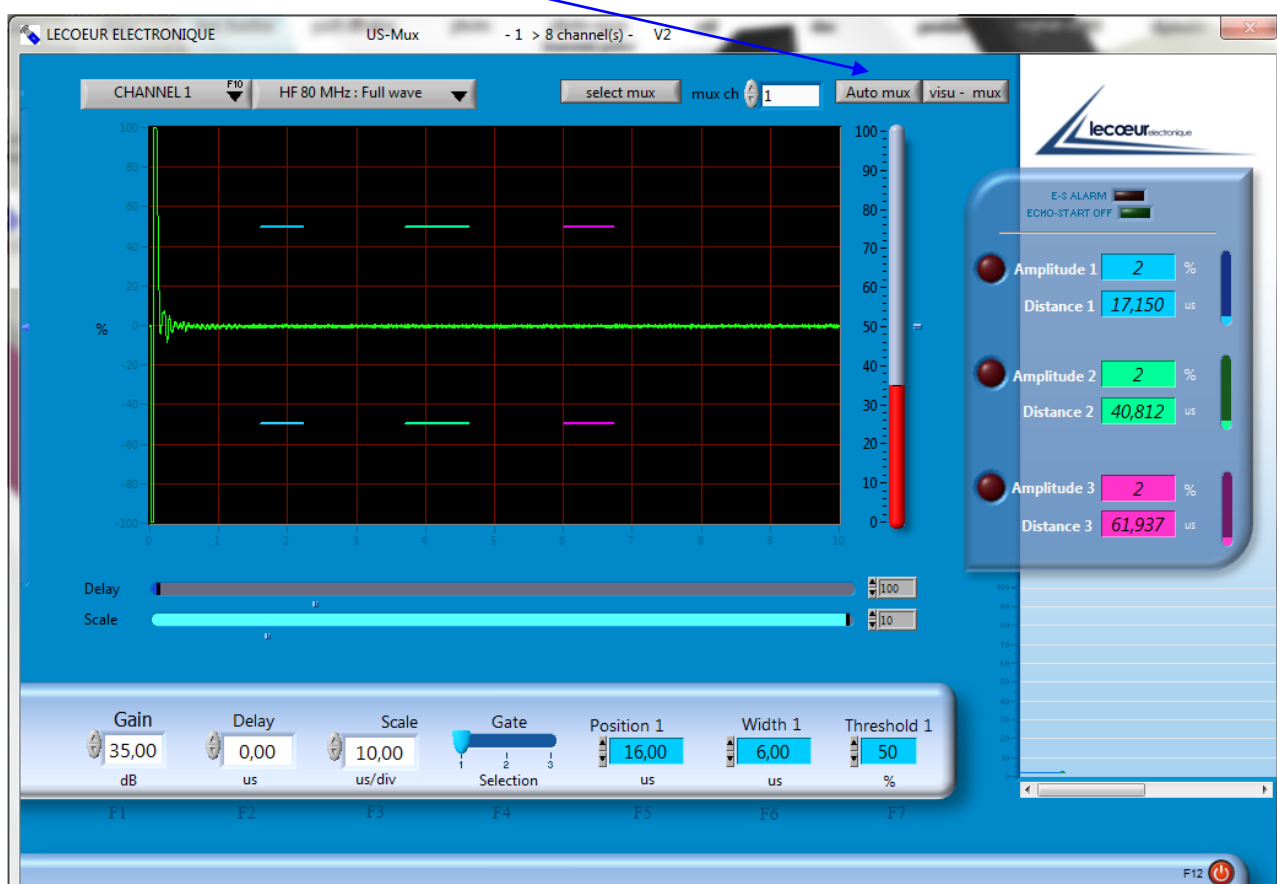

If the user want to use it manually , just select the channel and press select mux

a screen with a auto change of the mux is available when you press visumux. The parameters of the channel are the same for all the acquisition (gain/delay/ time)

visumux :

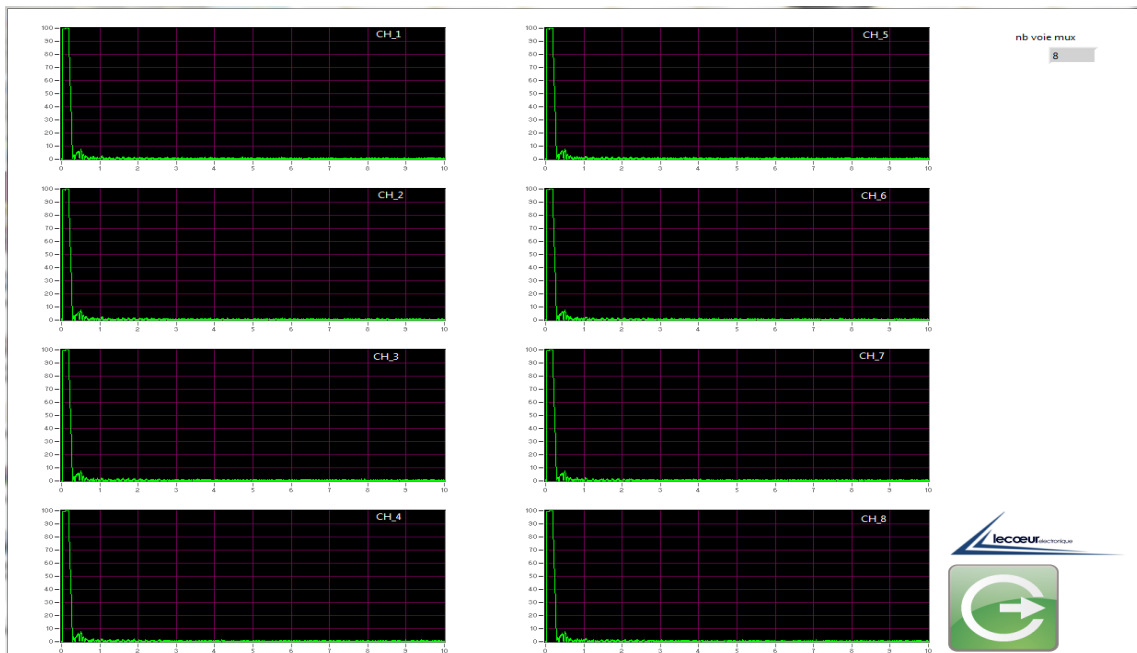

two function has been added on the dll apint :

- Select\_mux
- Auto\_mux

Auto\_mux = auto change mode , parameters 0/1 0 to stop auto mux and 1 to activate it.

Select\_mux = manual selection of the channel , parameters = 0 to 7.